Dome Heat Shrinkable Seal Fiber Optic Splice Closure (FOSC)

F2H-FOSC-BDH-M9 & F2H-FOSC-BDH-N5

Installation Manual

1. Scope of application

This Installation Manual suits for the Fiber Optic Splice Closure (Hereafter abbreviated as FOSC), as the guidance of proper installation.

The scope of application is: aerial, underground, wall-mounting, duct-mounting and handhole-mounting. The ambient temperature ranges from $-40\,^{\circ}\text{C}$ to $+65\,^{\circ}\text{C}$.

2. Basic structure and configuration

2.1 Dimension and capacity

Outside dimension (Height x Diameter)	470mm×210mm
Weight (excluding outside box)	2350 g— 3500g
GJS-D021:Number of inlet/out ports	9 pieces in general
GJS-D022:Number of inlet/out ports	5pieces in general
Diameter of fiber cable	Φ8mm~Φ25 mm
Capacity of FOSC	Bunchy: 24-144 (cores), Ribbon: up to432(cores)

2.2 Main components

No.	Name of components	Quantity	Usage	Remarks
1	FOSC cover	1 piece	Protecting fiber cable	Height x Diameter
			splices in whole	355mm x 150mm
2	Fiber optic splice tray	Max. 6 trays	Fixing heat shrinkable	Suitable for:
	(FOST)	(bunchy)	protective sleeve and	Bunchy:12,24(cores) Ribbon:6 (pieces)
		Max. 6 trays	holding fibers	Tuosomo (pieces)
		(ribbon)		
3	Fiber holding tray	1 pcs	Holding fibers with	
			protective coat	
4	Base	1set	Fixing internal and external	
			structure	
5	Plastic hoop	1 set	Fixing between FOSC	
			cover and base	
6	Seal fitting	1 piece	Sealing between FOSC	
			cover and base	
7	Pressure testing valve	1 set	After inject air, it is used for	Configuration as per
·			pressure testing and sealing	requirement

			testing	
8	Earthing deriving	1 set	Deriving metal parts of	Configuration as per
			fiber cables in FOSC for	requirement
	device		earthing connection	

2.3 Main accessories and special tools

	2.3 Main accessories and special tools				
No.	Name of accessories	Quantity	Usage	Remarks	
1	Heat shrinkable protective		Protecting fiber splices	Configuration as	
	sleeve			per capacity	
2	Nylon tie		Fixing fiber with protective	Configuration as	
			coat	per capacity	
3	Heat shrinkable fixing sleeve		Fixing and sealing single	Configuration as	
	(single)		fiber cable	per requirement	
4	Heat shrinkable fixing sleeve		Fixing and sealing mass of	Configuration as	
	(mass)		fiber cable	per requirement	
5	Branching clip		Branching fiber cables	Configuration as	
				per requirement	
6	Earthing wire	1 piece	Putting through between		
			earthing devices		
7	Desiccant	1 bag	Put into FOSC before sealing		
			for desiccating air		
8	Labeling paper	1 piece	Labeling fibers		
9	Special wrench	1 piece	Tightening nut of reinforced		
			core		
10	Buffer tube	decided by	Hitched to fibers and fixed	Configuration as	
		customers	with FOST, managing buffer.	per requirement	
11	Aluminum-foil paper	1 piece	Protect the bottom of FOSC		

3. Necessary tools for installation

3.1 Supplementary materials (to be provided by operator)

Name of materials	Usage
Scotch tape	Labeling, temporarily fixing
Ethyl alcohol	Cleaning
Gauze	Cleaning

3.2 Special tools (to be provided by operator)

Name of tools	Usage
Fiber cutter	Cutting off fiber cable
Fiber stripper	Strip off protective coat of fiber cable
Combo tools	Assembling FOSC

3.3 Universal tools(to be provided by operator)


Name of tools	Usage and specification
Band tape	Measuring fiber cable
Pipe cutter	Cutting fiber cable
Electrical cutter	Take off protective coat of fiber cable
Combination pliers	Cutting off reinforced core
Screwdriver	Crossing/Paralleling screwdriver
Scissor	
Waterproof cover	Waterproof, dustproof
Metal wrench	Tightening nut of reinforced core

3.4 Splicing and testing instruments (to be provided by operator)

Name of instruments	Usage and specification
Fusion Splicing Machine	Fiber splicing
OT DR	Splicing testing
Provisional splicing tools	Provisional testing
Fire sprayer	Sealing heat shrinkable fixing sleeve

Notice: The above-mentioned tools and testing instruments should be provided by the operators themselves.

4. Installation flow chart

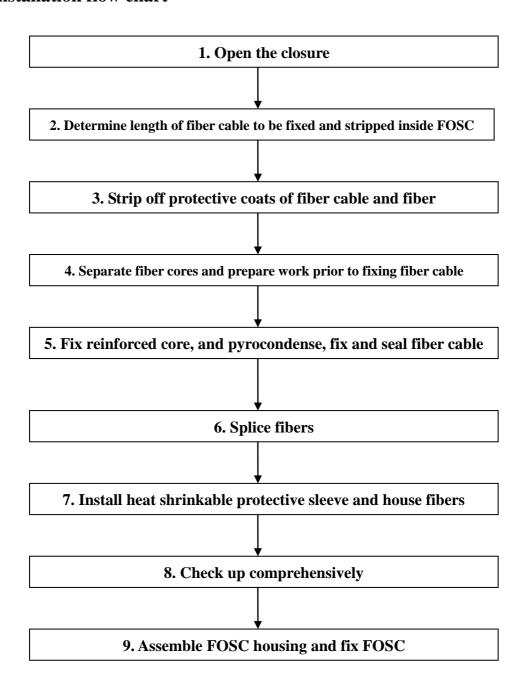

5. The process of installing FOSC.

5.1 Step One - Open the closure


- 5.1.1 Cleaning the locale and determine where to install the FOSC and then place fiber cables required.
- 5.1.2 Check whether the main components and accessories have been well prepared inside the package.

5.1.3 Open the closure

- ① Demount hoop fixing bolt and pull hoop locking system out, then proceed in demounting the hoop.
- ② Pull the FOSC cover upwards out, installation could begin.

5.1.4 See Drawing 1

Important issues: If the weather condition is not good enough, then a tent must be pitched for waterproof and dustproof.

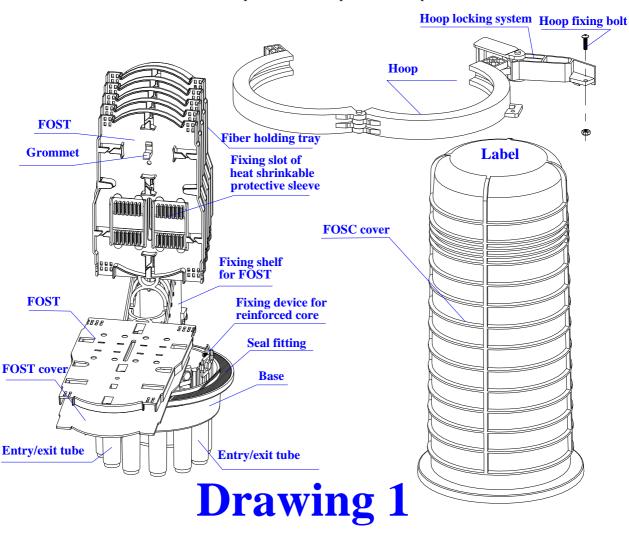


5.2 Step Two -Determine length of fiber cable to be fixed and stripped inside FOSC

- 5.2.1 If all fibers are for branch splicing, please refer to Drawing 2(A) for stripping length.
- 5.2.2 If some fibers are for straight-through, while others are for branch splicing, please refer to Drawing 2(B) for stripping length.
- 5.2.3 See Drawing 2.

Important issues: 1. Reserve enough length of fiber cable to be spliced.

2. Stripping length also could be decided by customers according to


installation requirement

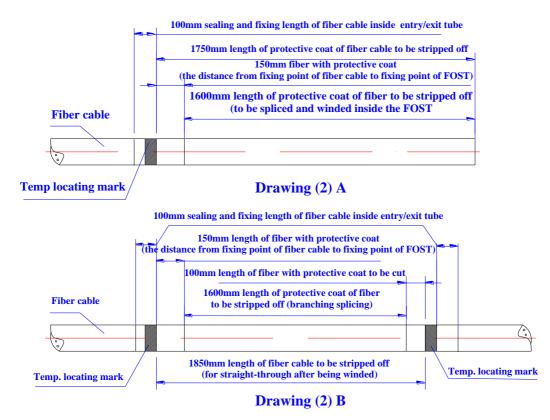

5.3 Step Three –Strip off protective coat of fiber cable and fiber

- 5.3.1 Strip off protective coat of fiber cable from the temp. locating mark with the cutter and the stripper, please refer to Drawing 2 for stripping length. Stripping length also could be decided according to installation requirement
- 5.3.2 See Drawing 3.

Important issues: If it is difficult to pull all the protective coat of fiber cable at one time, strip it off section by section to avoid fiber breakage.

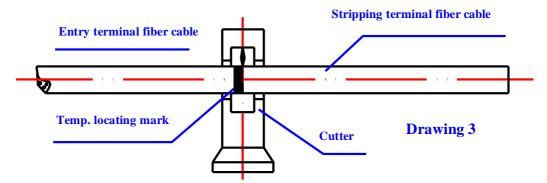


5.4 Step Four – Separate fiber cores and prepare work prior to fixing fiber cable.

5.4.1 Wind 2 layers of insulation tape on protective coat of fiber core for protection.

Meanwhile, get rid of the stuffing to separate fiber core and clean them. Form a ring with the diameter of 100mm or so and fix it on the fiber temporarily by adhesive tape.

- 5.4.2 Depending on fiber cable stripped, the following two cases are available.
 - ① All fibers are to be branched after being spliced completely.
 - ② Some of fibers are for straight-through after being winded, while the others are for branch splicing.
- 5.4.3 The FOSC is provided with 3 single entry/exit tubes which suit for single fiber cables with max. diameter ϕ 16mm and 1 mass entry/exit tube which suits for 1 piece of fiber cable with max. diameter ϕ 25mm or 2 pieces of fiber cables with max. diameter ϕ 21mm or multi-pieces of fiber cables with short diameter.
- 5.4.4 Mass entry/exit tube is required if some fibers are for straight-through
- 5.4.5 The corresponding entry/exit tube cover could be slightly knocked out with screwdriver from inside to outside according to number and diameter of fiber cable required.
- 5.4.6 Reserve reinforced core in 70mm length and cut off the unnecessary ones.
- 5.4.7 See Drawing 4 and Drawing 5.

Important Issues: Entry/exit tubes are to be selected accurately to make it easy for splicing and sealing.

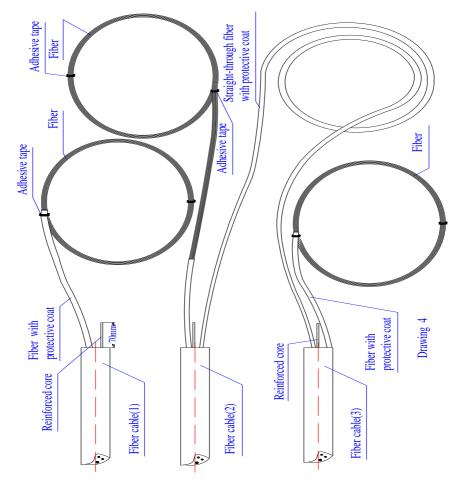


- 5.5 Fix reinforced core, and pyrocondense, fix and seal fiber cable.
 - 5.5.1 Insert fiber cable into the corresponding heat shrinkable fixing tube, further insert the

- them into entry/exit tube at the bottom of FOSC.
- 5.5.2 Demount fixing nut of reinforced core with a special wrench (plastic one), which is to be inserted into the fixing slot afterward and tighten it. Then retighten it with a metal wrench (the metal wrench is to be provided by operator).
- 5.5.3 Hitch heat shrinkable fixing sleeve to the fiber cable till its root by hand.
- 5.5.4 Please refer to Drawing 5 for installing branching clip.
- 5.5.5 Heat heat shrinkable fixing sleeve with fire sprayer to make it hugging entry/exit tube and fiber cable to reach complete sealing.
- 5.5.6 See Drawing 5

important issue: 1. Fixing nut of reinforced core should be tightened.

2. While heating, heat shrinkable fixing tube should shrink evenly, and there should be no bubbles, pores and other defects inside the tube.

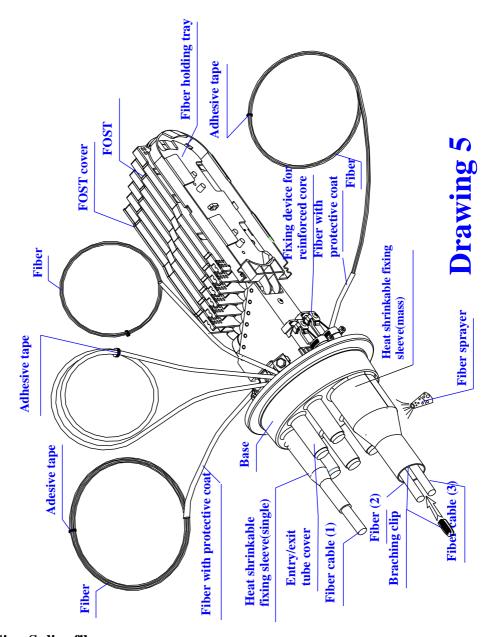

5.6 Step Six - Splice fibers

5.6.1 Follow user manual of fusion splicing machine to splice fiber.

Important issue: pay attention to the twist and bend of fiber


5.7 Step Seven -Install heat shrinkable protective sleeve and house fibers.

5.7.1 When having completed splicing the fibers, the first fiber ring should be housed on the farthest side of FOST, the remaining fiber optic should be winded, forming a ring with diameter not less than 80mm. then put it into FOST (Fiber Optic Splice Tray) together with heat shrinkable protective sleeve.
(Firstly fix heat shrinkable protective sleeve into the slot, then enlarge the diameter of

fiber ring properly.)

5.7.2 see Drawing 6

Important issue: pay attention to the twist and bend of fiber.

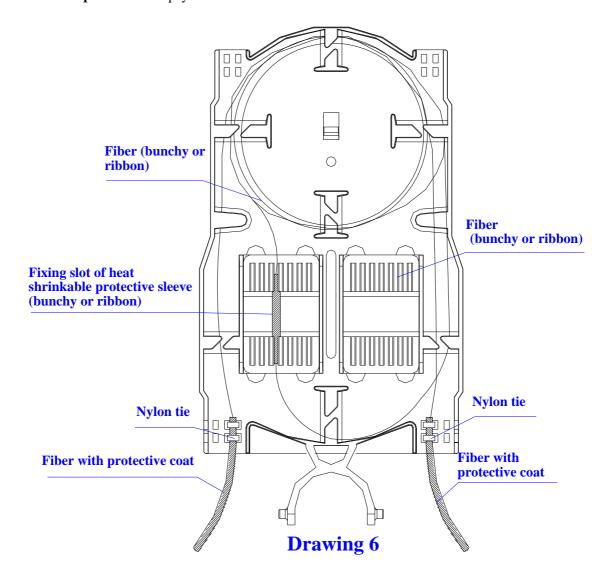


5.8 Step Eight - Check up comprehensively

To ensure the technical requirements, the following instructions must be followed:

- 5.8.1 Fibers with protective coat are fixed with nylon tie at the entrance of FOST.
- 5.8.2 Grommet should be pressed from inside to outside in order to properly install FOST.
- 5.8.3 Straight-through and reserved fibers with protective coat should be winded to the fiber holding tray.
- 5.8.4 Check whether the internal tighteners and fixing nut of reinforced core are well tightened.
- 5.8.5 Check whether seal fitting is installed neatly and smoothly.
- 5.8.6 Check whether heat shrinkable fixing sleeve is reliable and sealing completely.
- 5.8.7 See Drawing 7.

Important issues: If any problems occur, they should be solved right away.

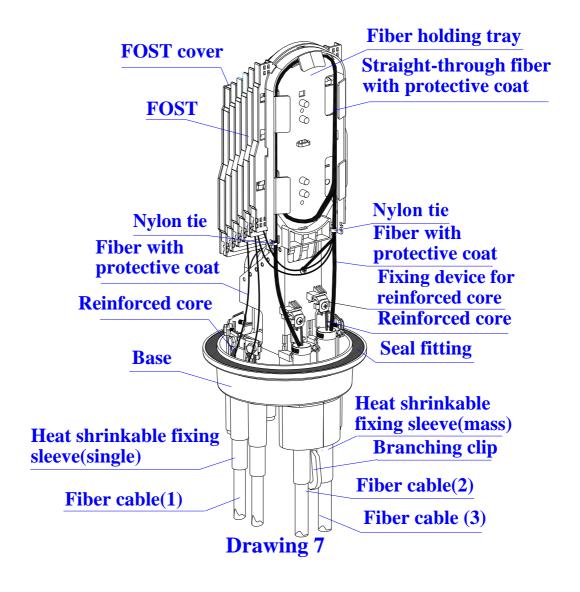


5.9 Step Nine – Assemble FOSC housing and fix FOSC

- 5.9.1 Put desiccant into FOSC.
- 5.9.2 Put FOSC cover on base directly.
- 5.9.3 Install plastic hoop between FOSC cover and base, tighten hoop locking system, which is to be fixed by hoop fixing bolt then.
- 5.9.4 FOSC installation
 - ① Aerial application: fix metal hoop and transom to the pole. Please refer to Drawing 8
 - ② Wall mounting application: fix the bracket on the wall with bolt. (metal hoop is not required.)
 - ③ Underground application: metal hoop is not required.

5.9.5 See drawing 8

Important issues: 1. Pay attention while installing plastic hoop.

2. The specification of bolt for fixing the bracket is M8.

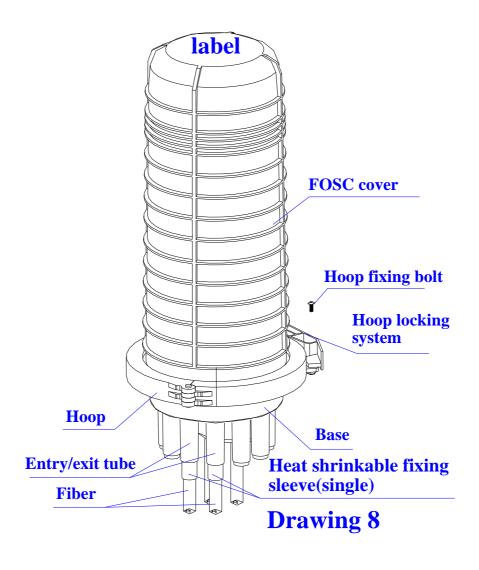

6. Fiber Optic Splice Closures (FOSC) inspecting and testing items

		Inspecting type		
Inspecting		Routine test		
item	Technical Requirements	(Before	T	
item		leaving	Type test	
		factory)		
Package	Each small package contains one fiber optic splice closure, together with its accessories, tools, installation manual and packing list.	ether with		
Appearance	Intact in shape, no burrs, bubbles, chaps, pores, warps, impurities and other defects, all background colors should be even and continual.	full		
Sign	There is a clear sign on the housing, such as name and model of the product, etc.			
Fiber	The fibers reserved are to be winded in fiber optic splice tray (FOST), the length of fibers housed in FOST is >1.6m, the curved radius is >30mm.			
storage	During the installation and maintenance, there should be no attenuation on			
device	fibers.			
Electrical	Inside FOSC: metallic components of fiber cables has the functions of			
jointing	electrical putting through, earthing connection and disconnecting. It is possible to install earthing deriving device outside the housing			
device	possess to instant cartaining deriving device outside the nousing		A 4 1 = - 4 2	
Sealing	After sealing according to the stipulated operation procedures, the injected		At least 3	
performanc	air pressure is 100KPa±5Kpa, when immersed in clean water of normal		sets	
e	temperature for 15 minutes, there should be no air bubbles, then observed for 24 hours, there should be no change of air pressure.	At least 3	sampled each time	
Re-sealing	After reopening and resealing according to the stipulated operation	sets sampled	cacii time	
_	procedures, the injected air pressure is 100KPa±5Kpa, when immersed in	each time		
performanc	clean water of normal temperature for 15 minutes, there should be no air bubbles, then observed for 24 hours, there should be no change of air			
e	pressure.			
Pull	on the nousing.			
Punching	- breakage on the housing			
Impact	Regging impact anargy of 16N • m 3 times of impacts there should be not			
	The spot between the FOSC and seal fitting can bear bending tension of			
Bending	150N at bending angle of $\pm 45^{\circ}$ for 10 circles, there should be no breakage			
	on the housing Bearing torsion 50N • m, 10 circle at torsion angle±90 ⁰ .			
Torsion	There should be no breakage on the housing.			
Temperatur e circle	Injected air pressure of $60\text{KPa}\pm5$ KPa, the temperature circle ranging from -40°C~+65°C, 10 times of the circular tests (one circular consists of high temperature for 2 hours + indoor temperature for 2 hours + low temperature for 2 hours + indoor temperature for 2 hours) when the pressure declines, the amplitude is $\leq 5\text{Kpa}$, immerse the swatch in clean water of normal temperature for 15 minutes, there should be no air bubbles.			
Voltage	After sealing the FOSC according to the stipulated operation procedures,			
resistance	immerse it in clean water of normal temperature in 1.5m depth for 24 hours, there should be no breakdown or arc over between the metallic			
	components of the FOSC, between metallic components and the ground at			
strength	DC 15KV for 1 minutes.			
Isolating	After sealing the FOSC according to stipulated operation procedure, immerse it in clean water in 1.5m depth for 24h, the isolating resistance			
resistance	between the metallic components of the FOSC, between the metallic			
	components and the ground should be $\geq 2 \times 10^4 \text{M} \Omega$.			